Programming your Baofeng made easy

- Set the radio in VFO mode (UV-82 press & hold while turning the radio on) (UV-5R press VFO/MR button)
- 2. Enter the repeater frequency, example: 146.940 press menu
- 3. Go to menu 11 "R-CTCS" press menu
- 4. Press the ↑ button until "114.8HZ" appears, press menu
- 5. Go to menu 13 "T-CTCS" press menu
- 6. Press the ↑ button until "114.8HZ" appears, press menu
- 7. Go to menu 25 "SFT-D" press menu
- 8. Press the ↑ button until "-" appears, press menu
- 9. Go to menu 26 "Offset" press menu
- 10. Enter the offset amount, for VHF use 000.600, press menu
- 11. Go to menu 27"MEM-CH appears, press menu
- 12. Press the ↑ until the wanted memory channel appears, example 110 press menu
- 13. Press the "EXIT/TAB" button
- 14. Briefly press the "scan" button, 146.340 should appear press menu
- 15. Go to menu 27"MEM-CH appears, press menu
- 16. Press menu
- 17. Press the "EXIT/TAB" button
- 18. Done, when in MR the 146.940 repeater is programmed in the channel 110

Note:

- This assumes that memory channel 110 is blank, if not Go to "menu" 25 and delete channel 110 first.
- You do not enter decimal points
- It is not possible to add "Alpha tags" from the key pad. This is only available with computer programming
- To program other channels simply change the frequency, tone, offset, direction and channel
- Most tones in Central lowa are 114.8 for VHF & 151.4 for UHF. There are a couple of exceptions so please check
- These directions have been tested on the UV-5R and the UV-82.
- Set the radio in VFO mode (UV-82 press & hold while turning the radio on) (UV-5R press VFO/MR button)

Disclaimer:

These directions have been tested on the UV-5R and the UV-82. Try this at your own risk. That said, if you have any problems feel free to contact the writer, Tom NØVPR at n0vpr@arrl.net I'd also be happy to help you with computer programming your Baofeng.